



DVSS4400

DVPN4400

DVAC Straight Suction

DVAC Power Nozzle

Owner's Manual

Operating and Maintenance
Instructions

Aspiración directa DVAC

Boquilla eléctrica DVAC

Manual Del Propietario


Instrucciones de Funcionamiento y
de Mantenimiento

Succion directe DVAC

Suceur électrique DVAC

Le Manuel du Propriétaire

Instructions d'Utilisation et d'Entretien

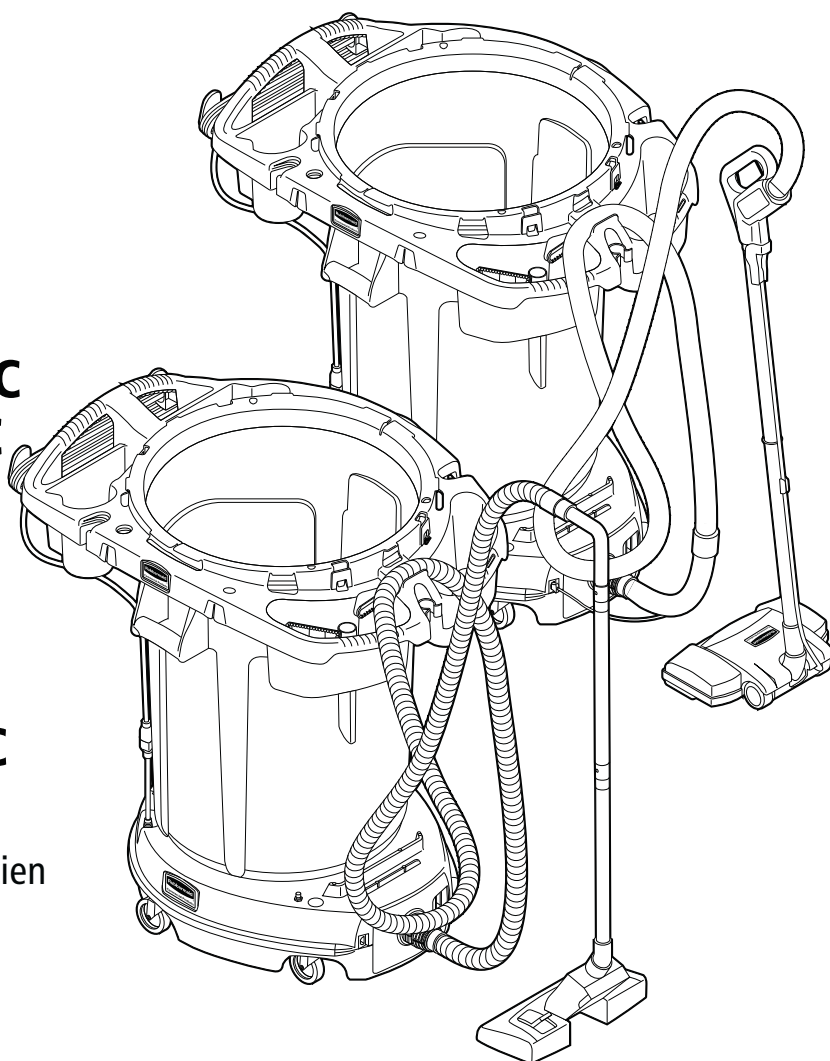

FOR COMMERCIAL USE

PARA USO COMMERCIAL

UTILISATION COMMERCIALE

Customer Service • Atención al Cliente • Service Clientèle
1-866-524-5233
www.rubbermaidvacuum.com

Work Smarter.



Congratulations!

Welcome to the world of smarter vacuums. As the proud new owner of Rubbermaid Commercial Product's DVSS4400 (straight suction) or DVPN4400 (power nozzle) upright vacuum cleaner, you can rest assured that you have purchased a convenient, efficient, and high-quality product. As with all of our products, your vacuum cleaner is backed by our uncompromising commitment to customer satisfaction.

For more Rubbermaid best-in-class products, visit our website at www.rcpworksmarter.com.

Table of Contents

Warranty	3
Troubleshooting	3
Safety Instructions	4
Maintenance	5
Electrical Grounding	5
Package Contents	6
Parts List	6
Assembled Views	7
Reorder Numbers	7
Assembly	8
Operation	10
Bag Replacement	10
Exhaust Filter Replacement	11
Accessory Location	12
DVAC Assembly Schematic	13
DVAC Ordering Information	14

One (1) Year Parts / One (1) Year Limited Labor Warranty

To the consumer, Rubbermaid Commercial Products, LLC (RCP) warrants to the original owner that this product is free from defects in material and workmanship for a period of one (1) year from the date of the original purchase. If within the first year this product becomes defective when used as directed under normal conditions, RCP will either repair or replace the product, covering all parts and labor costs. Product must be accompanied by a proof of purchase—a bill of sale, receipted invoice, or other proof that the product is within the warranty period—to obtain warranty service. RCP shall bear the cost of repairing/replacing the product and shipping it back to you. **RCP makes no other warranties, express or implied, concerning the product or the merchantability or fitness thereof for any purpose.**

This warranty does not apply to product that has been damaged as a result of improper maintenance, accident or other misuse. This warranty is void if the product is repaired or modified in any way by anyone other than an authorized service center. This warranty also does not cover normal wear items such as the following: brush, brush rolls, switches, belts, bags, filters, power cords, casters, wheels, and gaskets. This warranty does not cover unauthorized repairs. **In no event shall RCP be liable for incidental or consequential damages.**

For product replacement information, or questions regarding replacement parts, please contact customer service directly (within USA & Canada) at 1-866-524-5233.

Legal rights vary from state to state, so the above limitations may not apply to you if precluded by local law.

Troubleshooting

Problem	Reason	Solution
Vacuum cleaner won't run:	1. ON/OFF switch is in "OFF" position.	1. Press switch to "ON" position.
	2. Extension cord not firmly plugged into outlet.	2. Ensure that plug is securely inserted into electrical outlet.
	3. Power cord and extension cord not fully connected.	3. Ensure plug ends are fully connected.
	4. Thermal protector tripped	4. Vacuum cleaner motor will restart after cooling down. To prevent repeated tripping, clear all restrictions out of hose and tools. Replace paper bag and exhaust filter, if necessary.
	5. Blown fuse or tripped breaker.	5. Replace fuse/reset breaker.
	6. Motor does not work.	6. Please contact customer service or authorized service center.
	7. Broken switch.	7. Please contact customer service or authorized service center.
Vacuum cleaner won't pick up/low suction:	1. Debris plugging hose, wand or accessory tool.	1. Remove obstruction.
	2. Paper bag is full.	2. Replace paper bag – See page 10.
	3. Hose and/or Door not properly connected.	3. Ensure hose and door are firmly connected.
	4. Hose is cracked/damaged.	4. Replace hose.
Bag full light is on:	1. Debris plugging hose, wand or accessory tool.	1. Remove obstruction.
	2. Paper bag is full.	2. Replace paper bag – See page 10.
Bag door won't close:	1. No bag in vacuum.	1. Install bag – See page 10.
Dust escaping from vacuum:	1. Paper bag is damaged.	1. Inspect/replace damaged bag.
Power nozzle not working:	1. ON/OFF switch in the power nozzle handle is in the "OFF" position.	1. Press switch to "ON" position.
	2. Brushroll jammed.	2. Press power nozzle switch to "OFF" position. Remove obstruction from power nozzle brush chamber. Press switch to "ON" position.
	3. Brushroll motor or belt damaged.	3. Please contact customer service or authorized service center.

ANY OTHER SERVICING SHOULD BE DONE BY AN AUTHORIZED SERVICE REPRESENTATIVE

Customer Service (1-866-524-5233)

In the event further assistance is required, please call the customer service number above, or contact an authorized service center. Proof of purchase will be required before service is rendered. Transportation charges to and from the repair location must be paid by the purchaser. For quick troubleshooting, please go to www.rubbermaidvacuum.com.

This warranty does not apply outside of the fifty United States and Canada. This warranty excludes repairs to parts or systems resulting from unauthorized modifications made to the vacuum cleaner.

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

When using an electrical appliance, basic precautions should be followed, including the following:

⚠ WARNING

Read all instructions before using vacuum cleaner. Follow all label and marking instructions found on unit. Failure to do so may result in serious injury or death.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY:

- **DO NOT** expose to rain. Store indoors.
- Fully assemble before operating.
- **DO NOT** use without dust bags and/or filters installed.
- **DO NOT** leave unattended when plugged in. Unplug from outlet when not in use, and before servicing.
- **DO NOT** use outdoors or on wet surfaces. **DO NOT** handle vacuum cleaner or plug with wet hands.
- Only plug vacuum cleaner into a properly grounded outlet. See “**Electrical Grounding**” instructions.
- **DO NOT** unplug by pulling on power cord. To unplug from an outlet, pull by the plug, not the cord.
- **DO NOT** use with damaged cord or plug.
- **DO NOT** pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. **DO NOT** run vacuum cleaner over power cord. Keep cord away from heated surfaces.
- Turn on/off switch to “off” before unplugging.
- **DO NOT** leave power cord lying on floor when not in use. It can become a tripping hazard.
- **DO NOT** use to pick up flammable or combustible liquids. **DO NOT** use in areas where these substances may be present. Electrical devices produce arcs or sparks that can cause explosions. **DO NOT** use anywhere that gasoline is dispensed.
- **DO NOT** use in an enclosed space where flammable, explosive, or toxic vapors are given off by oil base paint, paint thinner, certain mothproofing substances, or in an area where flammable dust is present.
- **DO NOT** pick up toxic/carcinogenic/hazardous materials such as chlorine, bleach, drain cleaner, gasoline, asbestos, pesticides, or lead.
- **DO NOT** pick up any materials that are burning or smoking, such as cigarettes, matches, or hot ashes.
- During use, keep hose, wands, and other openings away from your face and body. Keep hands, feet, hair, loose clothing, and other body parts away from openings and moving parts.
- **DO NOT** put any object into openings. **DO NOT** use with any opening blocked; keep free of dust, lint, hair, or anything that may reduce air flow.
- Only use manufacturer’s recommended attachments.
- Use only as described in this manual.
- Use with caution on stairs.
- Use with caution when vacuuming over area rug edges and fringe.
- **DO NOT** allow to be used as a toy. Close attention is necessary during use by or around children.
- If vacuum cleaner is not working as it should—or has been dropped, damaged, left outdoors, or exposed to water—discontinue use immediately and take it to a service center for inspection. Call 1-866-524-5233 to find a location near you.

IMPORTANT SAFETY INSTRUCTIONS (cont.)

⚠ WARNING

This product contains chemicals known to the State of California to cause cancer, birth defects, and other reproductive harm. Wash hands after handling.

Maintenance

Proper maintenance of your vacuum cleaner will assure continued effective cleaning performance.

1. Always use genuine Rubbermaid Commercial Products replacement parts.
2. Replace paper bag frequently.
3. Clean or replace exhaust filter as necessary.

Thermal Protector

This vacuum cleaner is equipped with a self-resetting thermal protector to protect it from overheating. When the thermal protector activates, the vacuum cleaner's motor will stop running. The motor will restart after cooling down. To prevent repeated tripping of the thermal protector, clear all restrictions out of hose, wand and tools. Replace the paper bag, and clean or replace the exhaust filter if necessary. Clear all restrictions to exhaust air flow.

Electrical Grounding

This appliance must be grounded. Should the unit malfunction, grounding provides a path of least resistance for the electric current. This reduces the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor, and a grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.


⚠ WARNING



ELECTRICAL SHOCK

HAZARD Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you are unsure if an outlet is properly grounded. **DO NOT** modify the plug provided with the appliance to fit an outlet, have a proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120-volt circuit and has a 50-foot grounded extension cord that looks like the illustration in the sketch below. Wrap cord on rim caddy as shown in Step 6, on page 9. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adaptor should be used with this appliance.

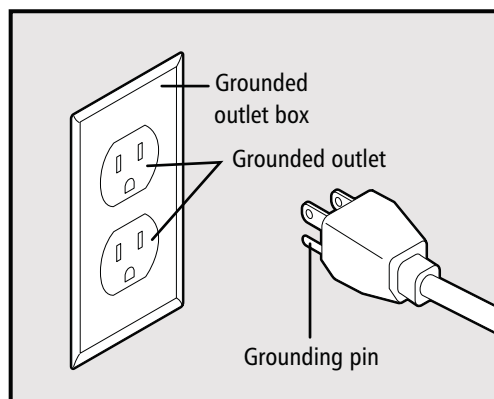

⚠ WARNING





FIRE OR ELECTRICAL SHOCK HAZARD



Use only a 16 gauge or higher 3-wire SJT extension cord with this vacuum cleaner. Using a cord of different type or AWG may result in increased risk of fire or electrical shock.

Package Contents


Please confirm that all items shown in the image below are included in the packaging.
If any parts are missing, please call customer service at 1-866-524-5233.

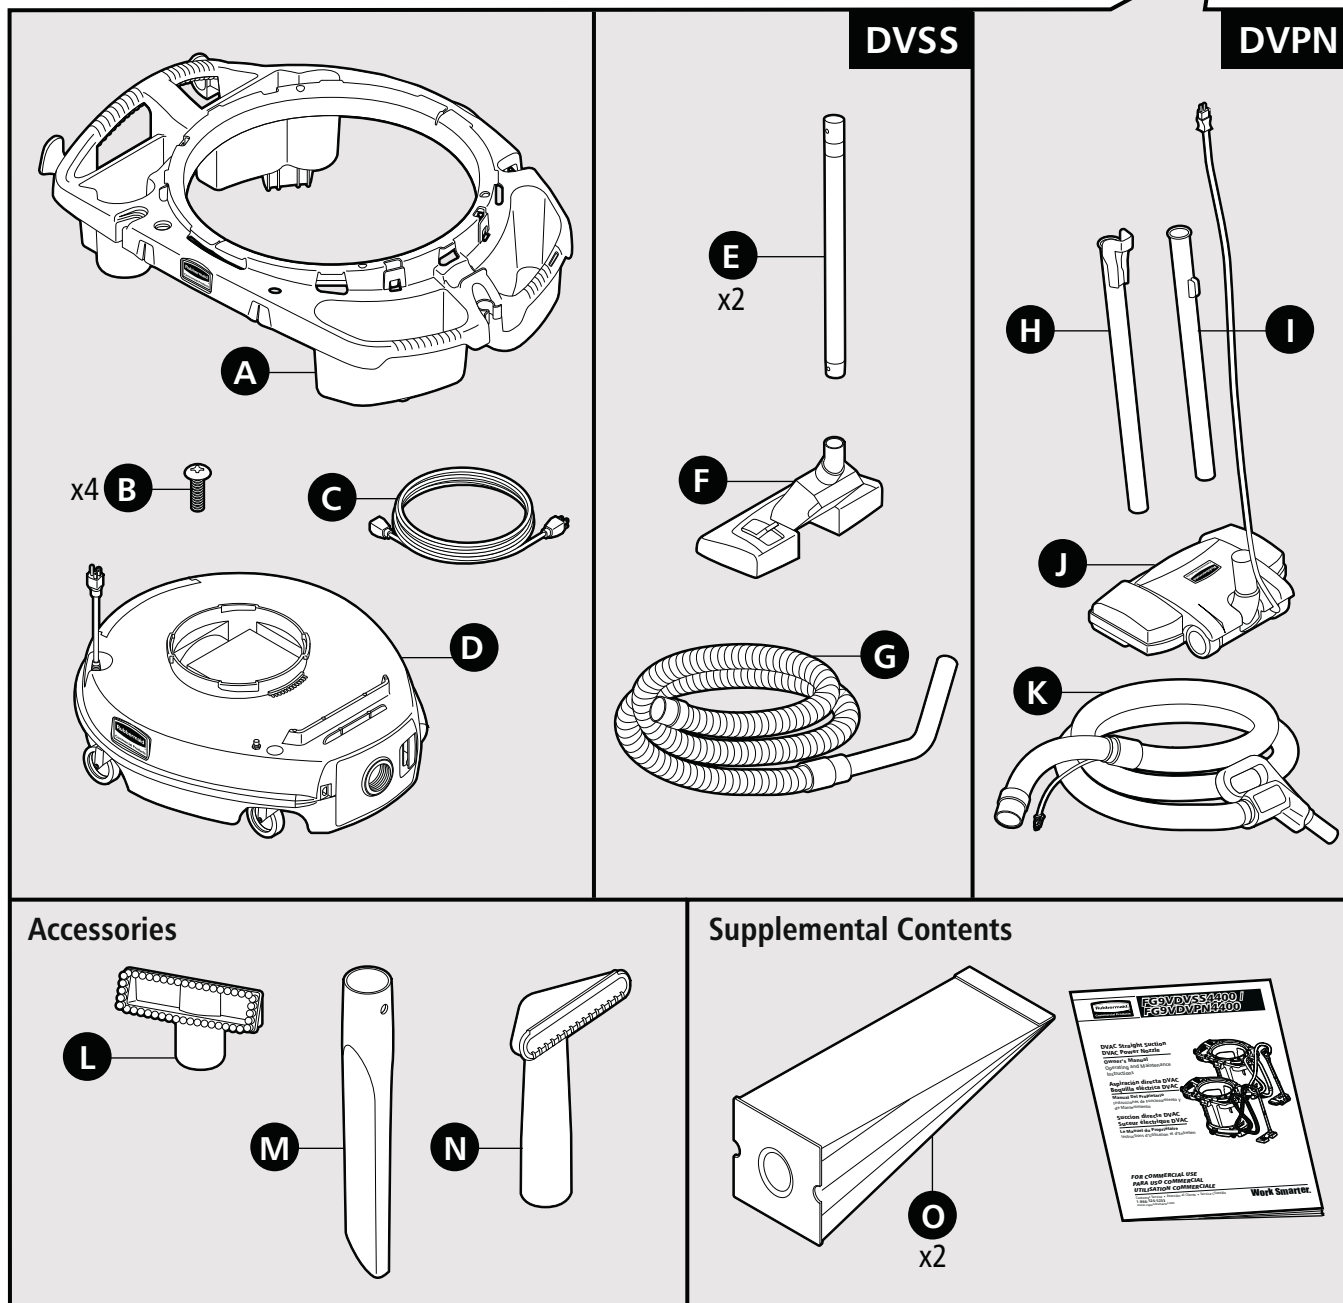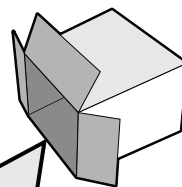

Parts List

- | | | |
|---------------------------|---|-------------------------------|
| A deluxe rim caddy | F straight suction nozzle (DVSS) | K electric hose (DVPN) |
| B screws | G hose (DVSS) | L dusting brush |
| C extension cord | H upper wand (DVPN) | M crevice tool |
| D vacuum base | I lower wand (DVPN) | N upholstery tool |
| E wand (DVSS) | J power nozzle (DVPN) | O vacuum bag |

Assembled Views






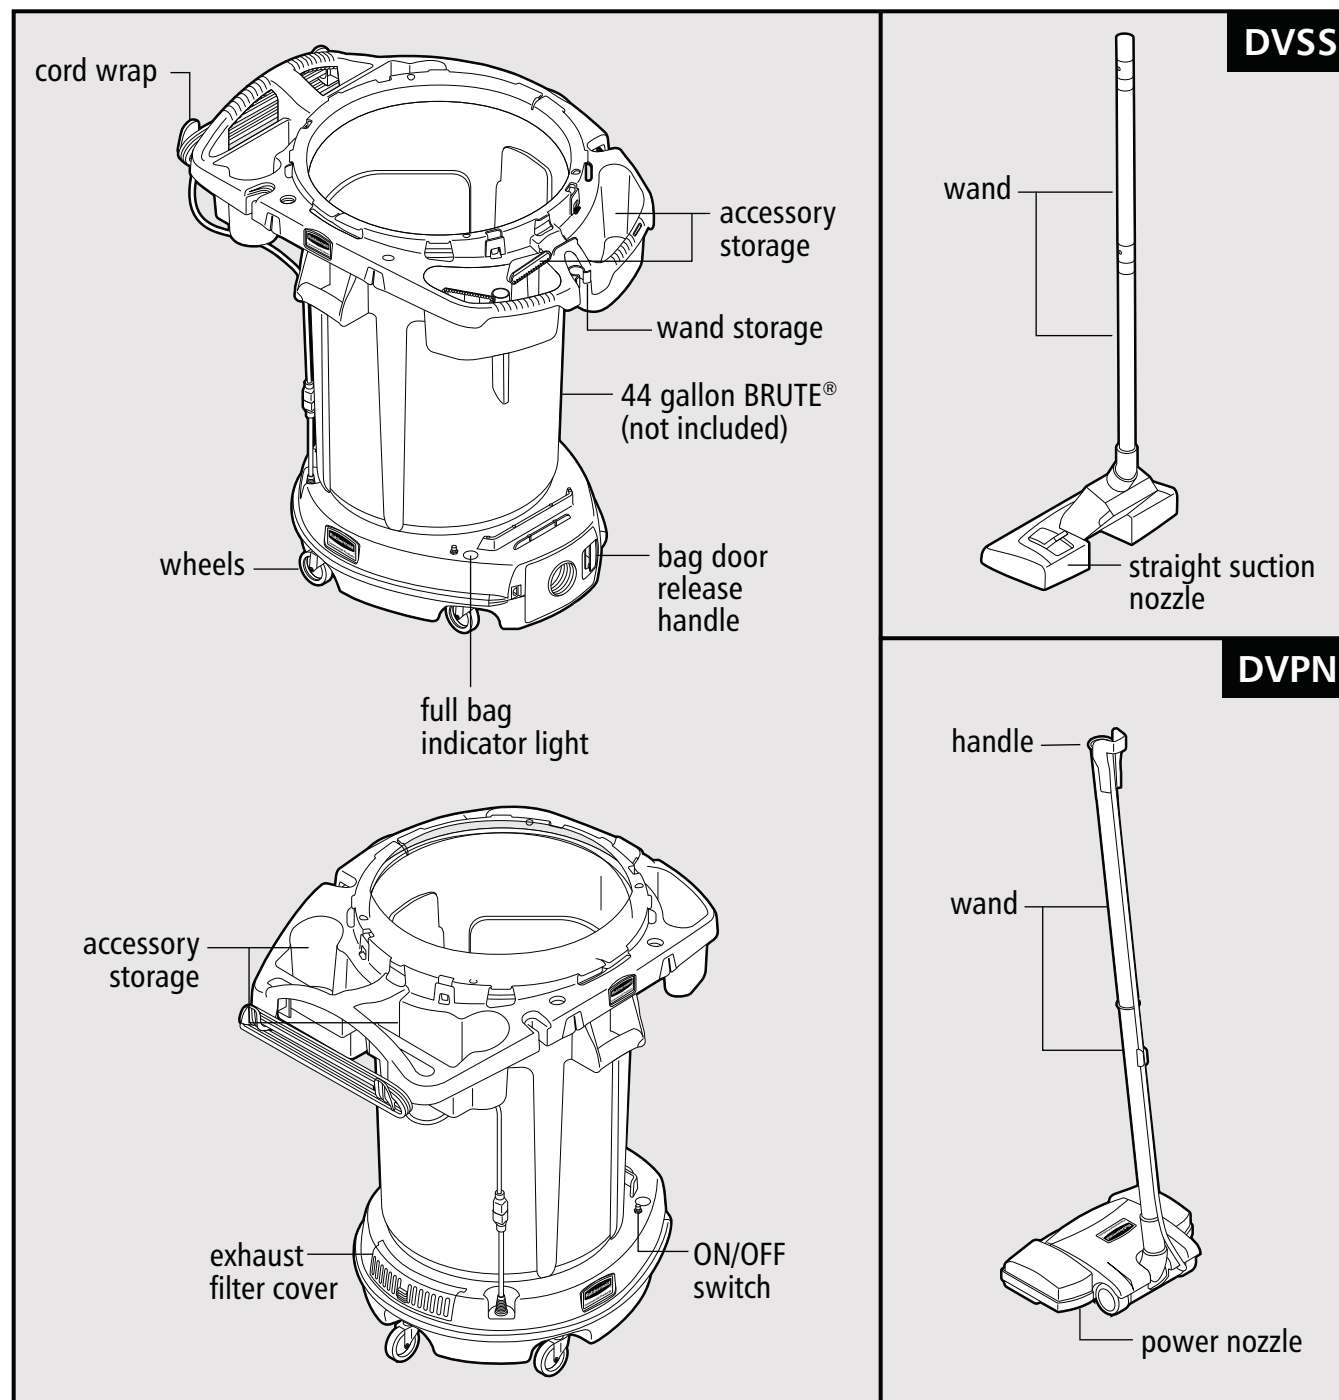


Reorder Numbers







paper bag:..... **FG9VDVPB10**
 hepa bag: **FG9VDVHP10**
 exhaust filter: **FG9VDVEF44**

Reorder by logging on to www.rubbermaidvacuum.com or by contacting your local distributor. Call customer service at 1-866-524-5233 for service and to order genuine Rubbermaid Commercial Products replacement parts.





Assembly

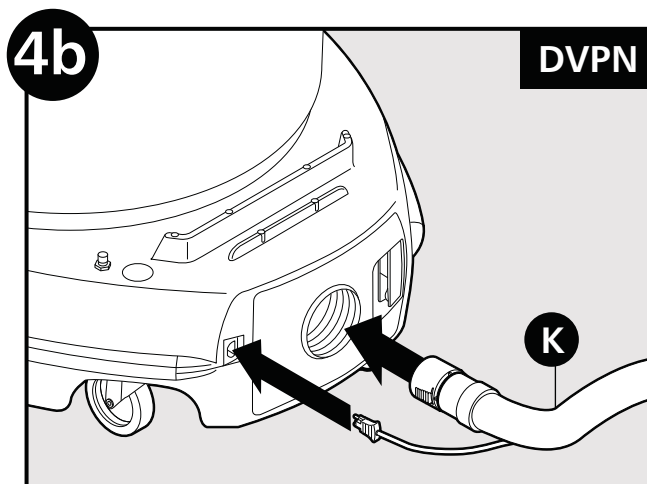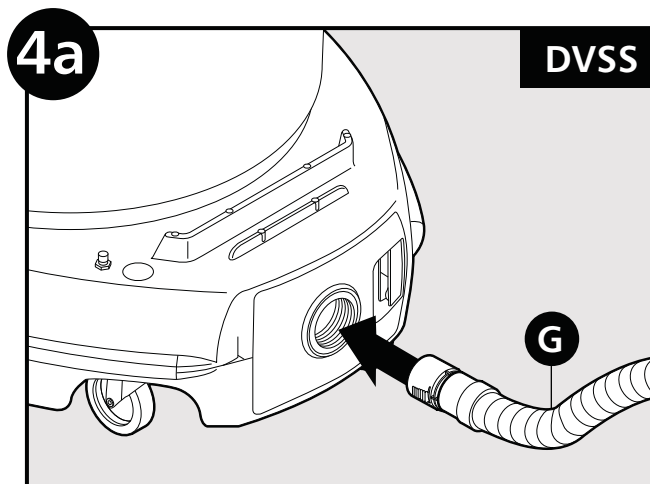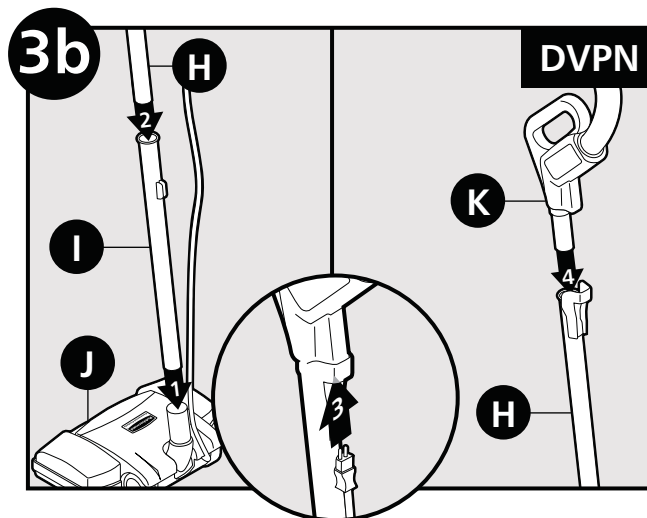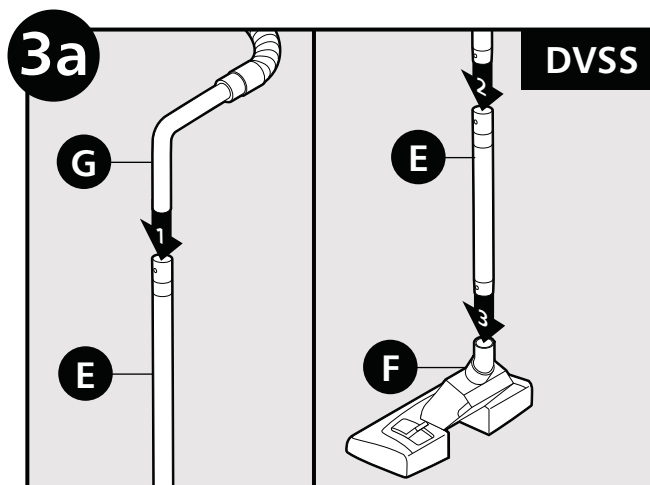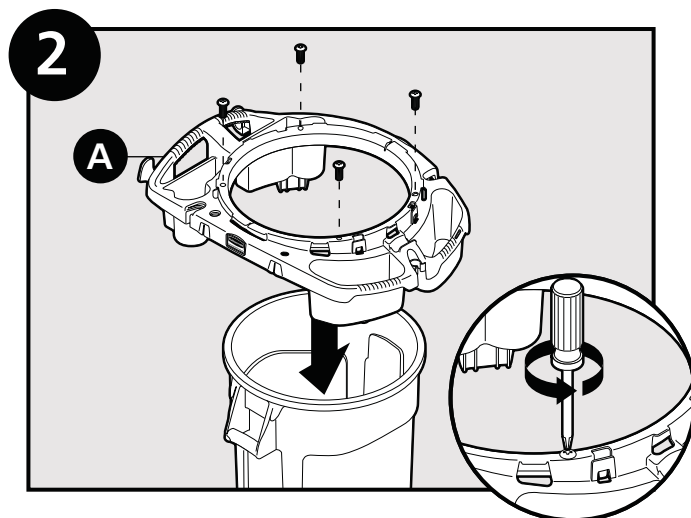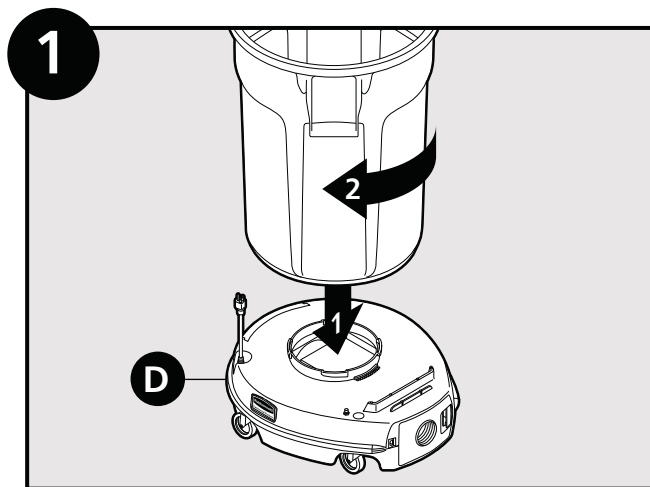



Assembly (cont.)

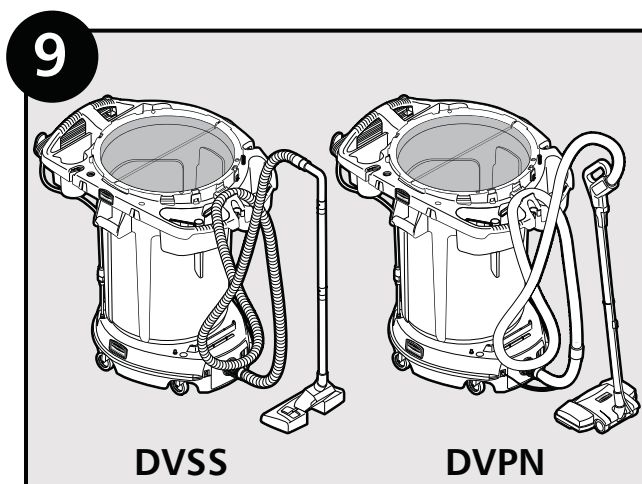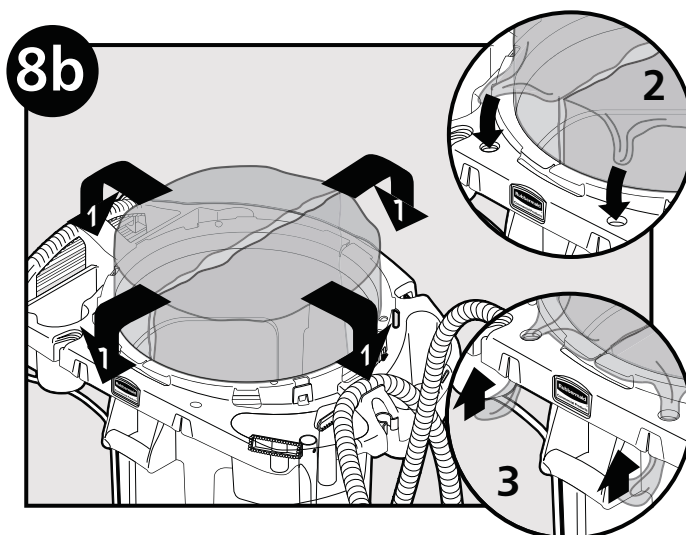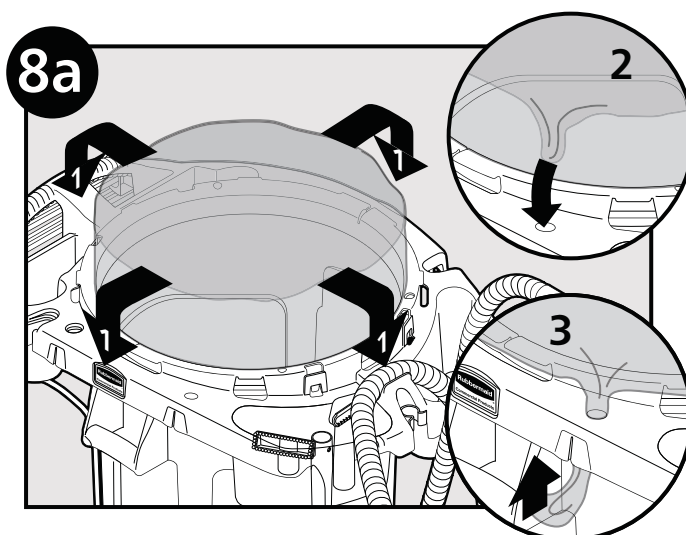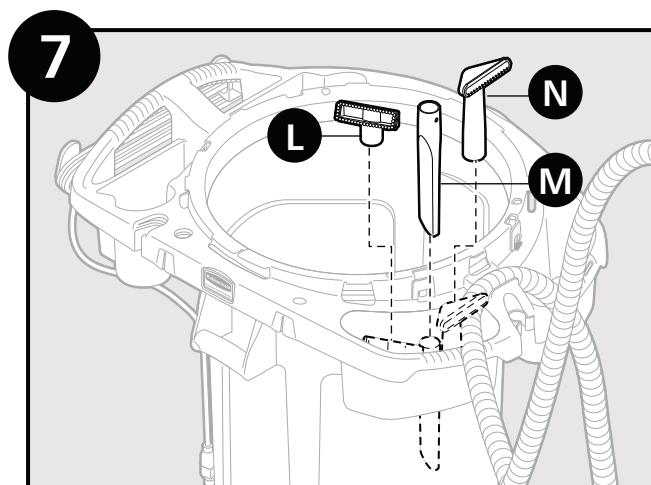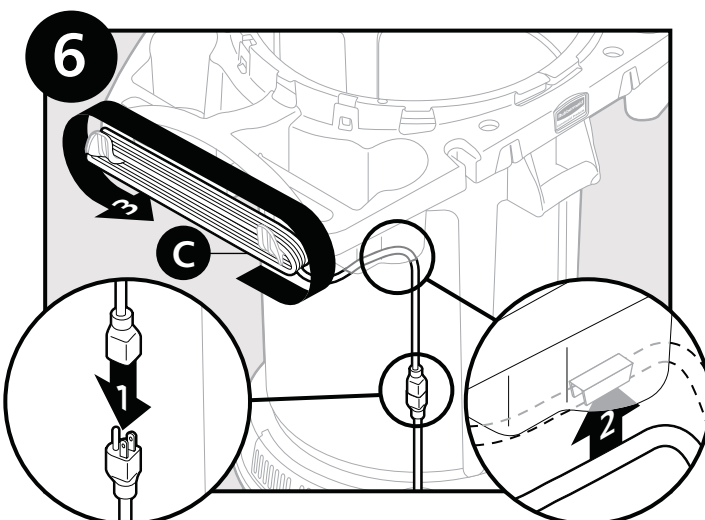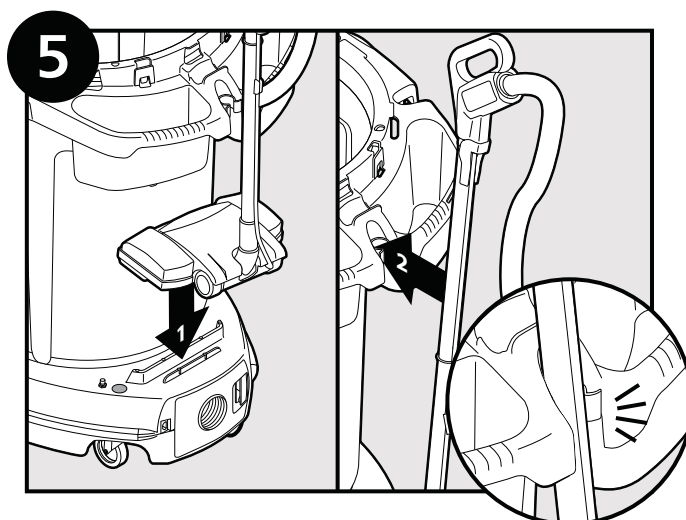


Operation

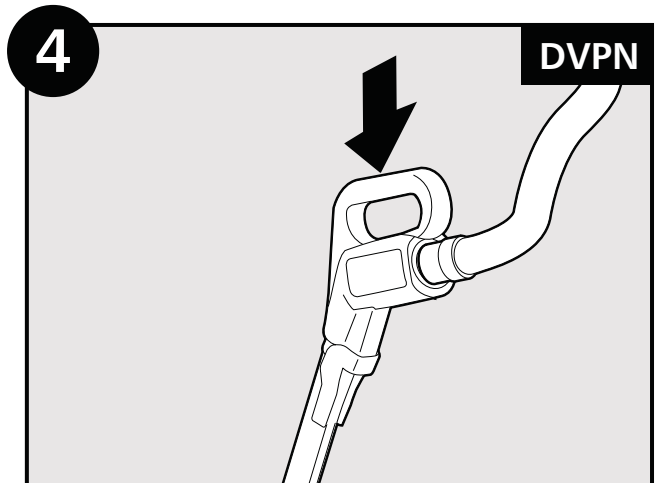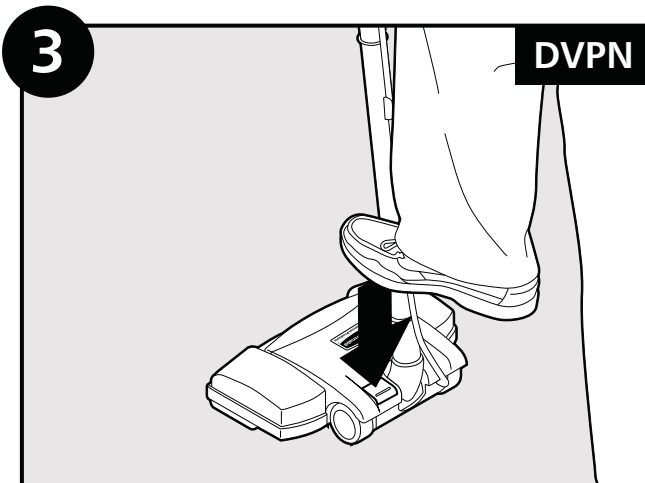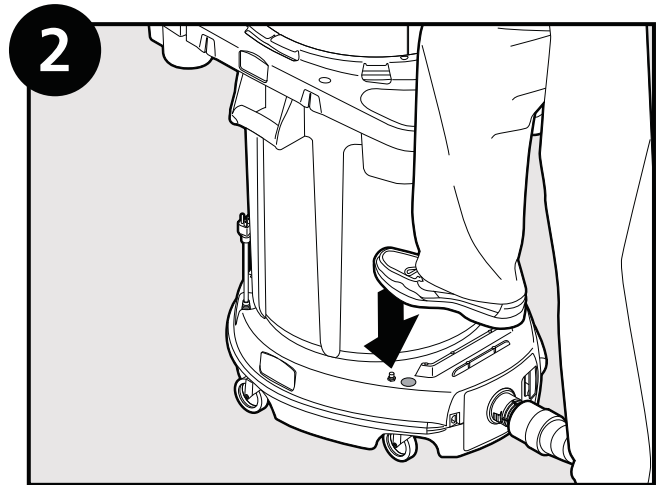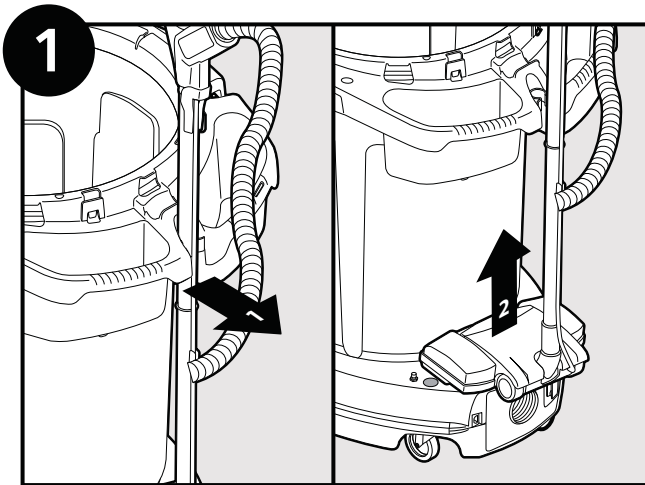




Bag Replacement

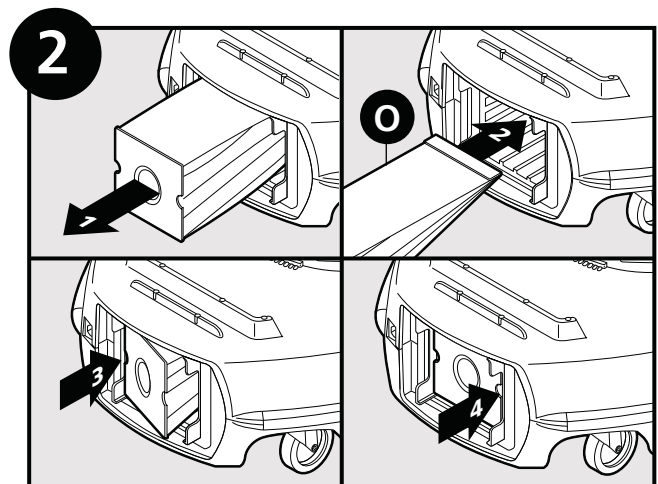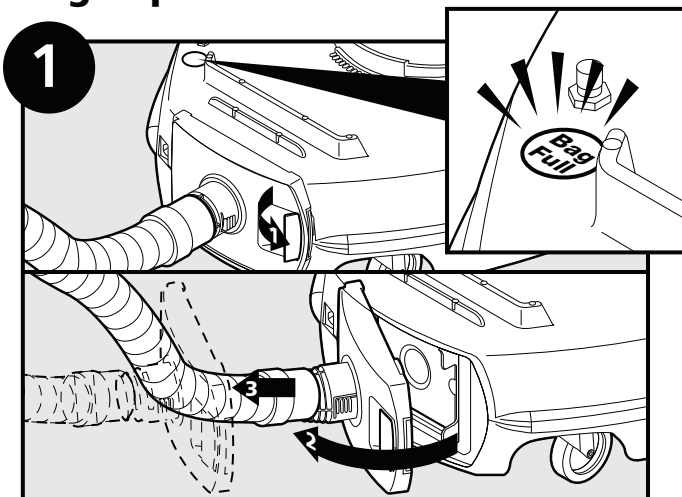

Bag Replacement (cont.)

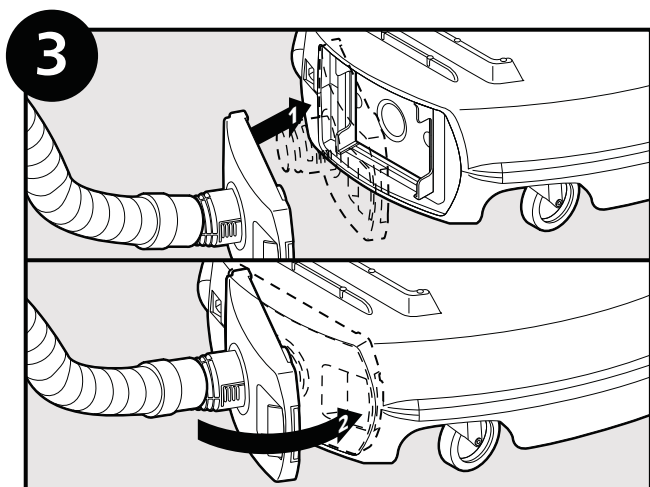


Exhaust Filter Replacement

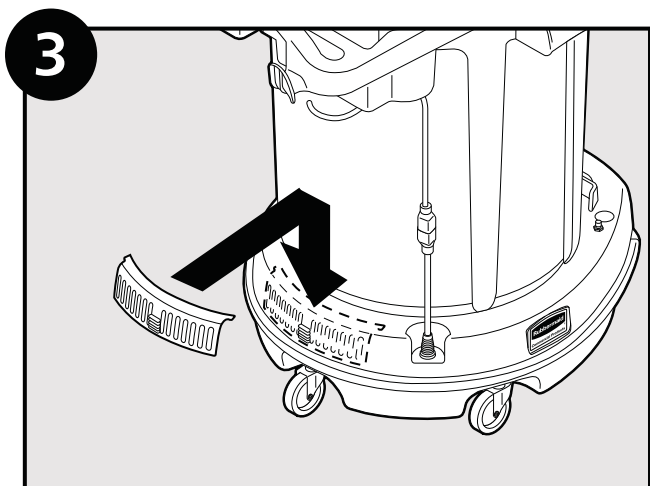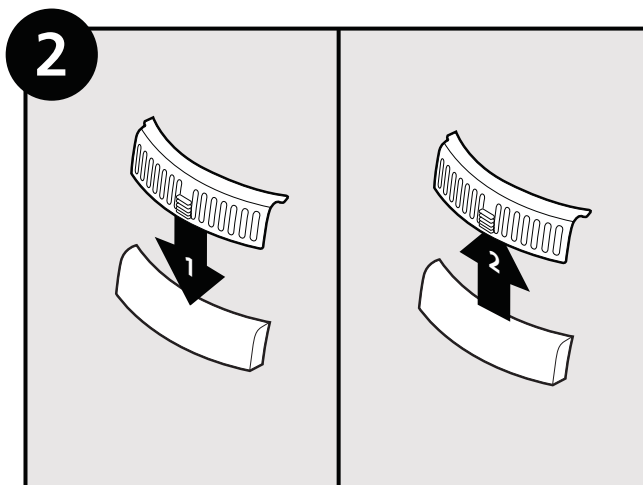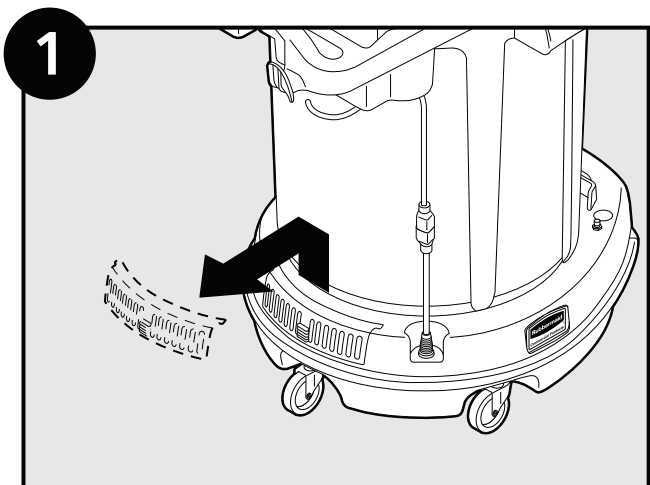


Accessory Locations

Locations for storing 2 spray bottles, micro fiber general purpose cloths, vacuum accessories, 6 gallon polyliners, 44 gallon polyliners, quick connect flexible dusting wand, quick connect short extension handle, Rubbermaid Pulse, mesh bag for soiled microfiber bags, floor sign.

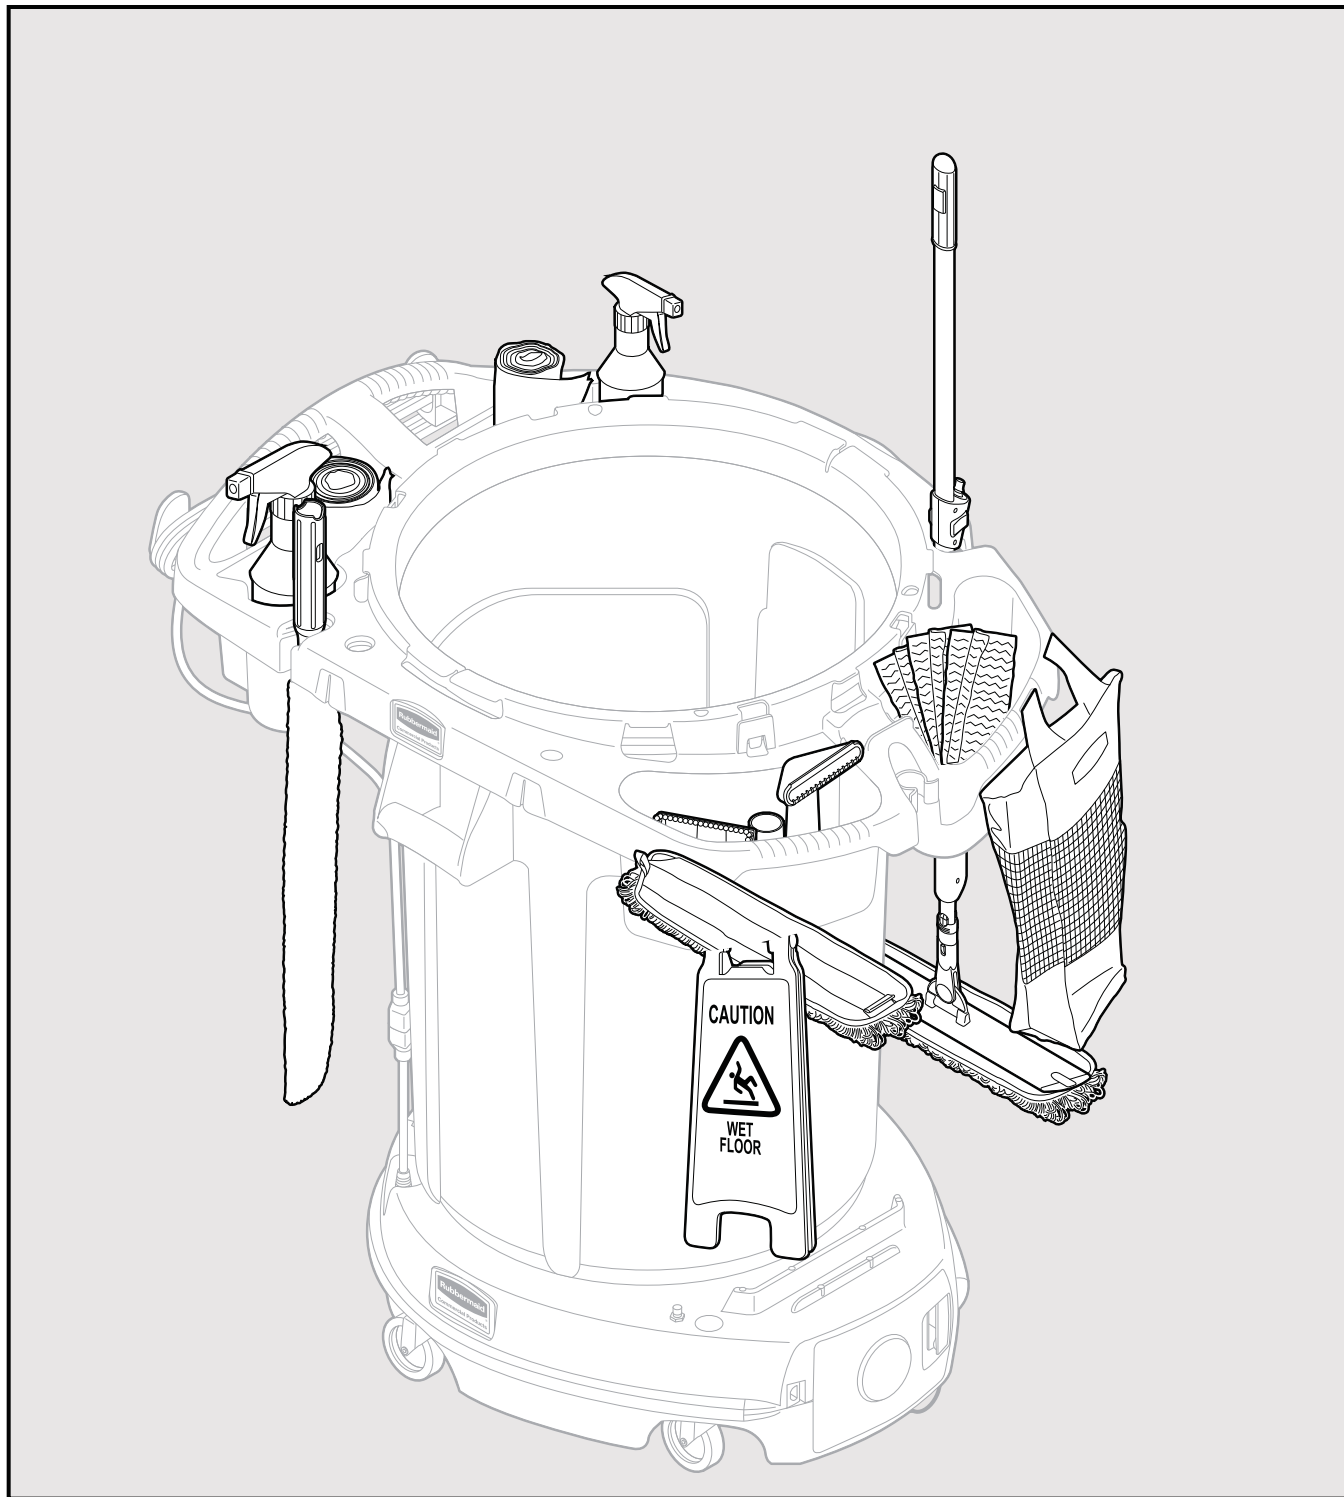

DVAC Assembly Schematic

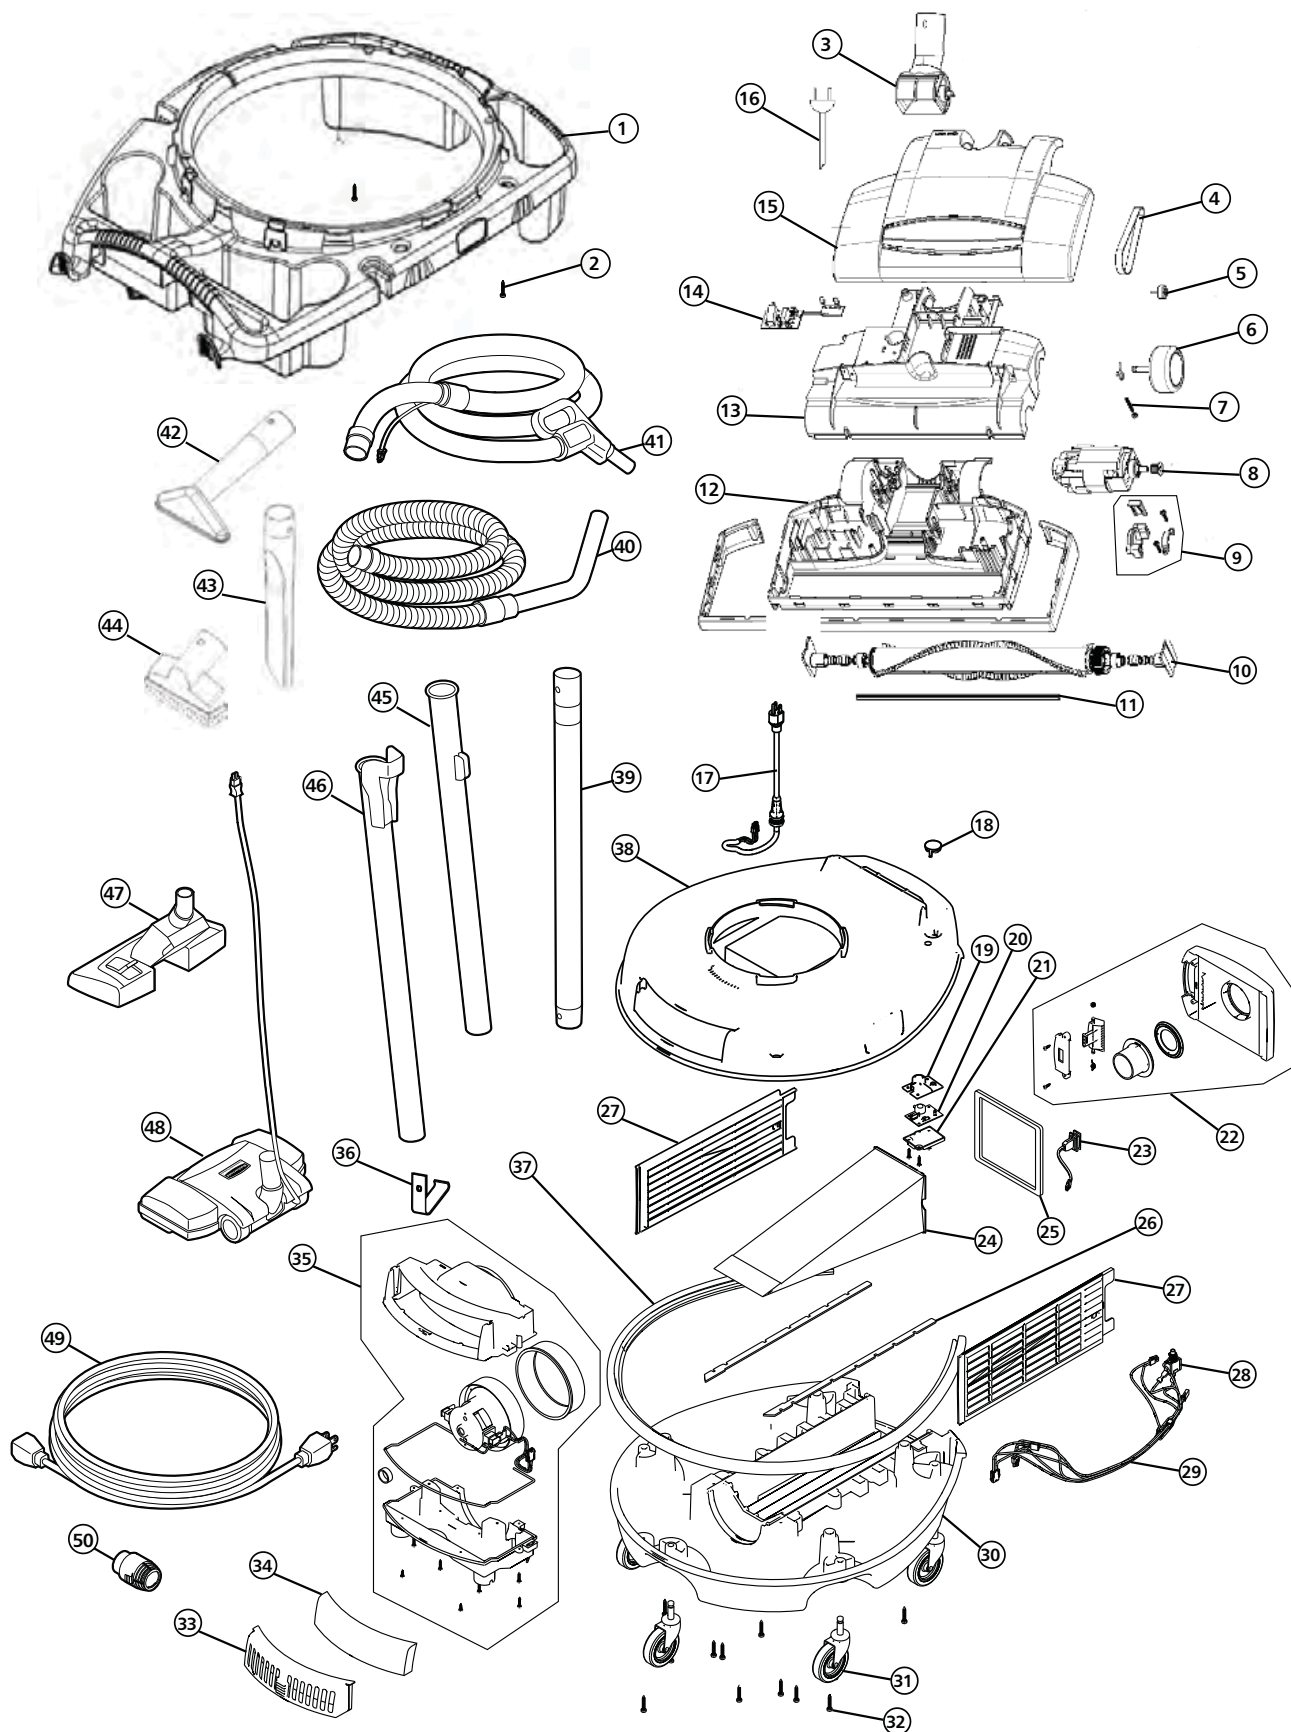

DVAC Ordering Information

Item (in spec book)	Description	Part Number
1	Deluxe Rim Caddy	9VDVRC4400
2	1/4" – 20 Cross Tip AB PH Screw	FGDVSS-M9
3	Power Nozzle Neck	FGDVPN-M2
4	Power Nozzle Belt	FGDVPN-N3
5	Power Nozzle Front Wheel w/ Axle	FGDVPN-N2
6	Power Nozzle Rear Wheel w/ axle	FGDVPN-N1
7	Power Nozzle Screw-Long	FGDVPN-N4
8	Power Nozzle Motor Complete	FGDVPN-M0
9	Power Nozzle Motor Mounting Set	FGDVPN-M9
10	Brush Roll Complete	FGDVPN-M7
11	Wiper Blade	FGDVPN-M8
12	Base Complete	FGDVPN-M6
13	Power Nozzle Motor Cover	FGDVPN-M5
14	Power Nozzle Circuit Board	FGDVPN-M4
15	Power Nozzle Cover Complete	FGDVPN-L9
16	Power Nozzle Cable	FGDVPN-M3
17	Pigtail Cord Assembly	FGDVSS-M1
18	Bag Full Lens	FGDVSS-L3
19	PCB Top Enclosure	FGDVPN-L6
20	Bag Full PCB LED Board Kit	FGDVSS-M8
21	PCB Bottom Enclosure	FGDVPN-L7
22	Door Assembly Kit	FGDVSS-M6
23	Female Power Connector	FGDVPN-N5
24	Paper Bag	FG9VDVPB10
25	Door Gasket	FGDVSS-L9
26	Bag Chamber Gaskets (Qty 2)	FGDVPN-L0
27	Air Grate Kit (Qty 2)	FGDVSS-L7
28	Power Switch (DVPN)	FGDVPN-N6
29	Wire Harness (DVPN)	FGDVPN-L8
30	Dolly Bottom	N/A
31	Swivel Casters	FGDVPN-M1
32	#10 – 14 x 1.25 2/8" Twin Lead 'Plastite" PH Torx Screw (Qty 14)	FG9VDVEF44
33	Exhaust Filter Door	FGDVSS-L5
34	Exhaust Filter	FG9VDVEF44
35	Suction Motor	FGDVSS-L2

Item (in spec book)	Description	Part Number
36	Bag In-Place Spring Kit	FGDVSS-L8
37	Extruded Bumper Kit	FGDVPN-L3
38	Dolly Top	N/A
39	Straight SuctionWand (DVSS)	FGDVSS-L0
40	Non-Power Hose Assembly (DVSS)	FGDVSS-M5
41	Power Hose Assembly (DVPN)	
42	Upholstery Tool	FGDVSS-M7
43	Crevice Tool	FGDVSS-M2
44	Vacuum Tool with Bristles	FGDVSS-M0
45	Power Lower Wand Assembly	FGDVPN-L4
46	Power Upper Wand Assembly	FGDVPN-L5
47	Straight Suction Floor Nozzle	FGDVSS-L6
48	Wessell Power Nozzle Assembly	FGDVPN-L2
49	50 Ft. Power Cord	FGDVPN-L1
50	Hose Coupling	FGDVSS-L4
Not pictured		

Pricing, specifications, and product availability are subject to change without notice.
Item is a finished good, please see RCP Catalog for Distributor pricing.

WARNING: TO REDUCE THE RISK OF ELECTRICAL SHOCK OR INJURY, ALWAYS DISCONNECT THE APPLIANCE CORD FROM THE ELECTRICAL OUTLET PRIOR TO SERVICING.